


Main Fuse A:

The main fuse A (1) is located behind the rear cowl.

The specified fuse is:

30 A

1. Remove the rear cowl (page 55).
2. Disconnect the wire connector (2) of the starter magnetic switch.
3. Pull out the old fuse and install a new fuse.
The spare main fuse (3) is located under the starter magnetic switch.
4. Reconnect the connector and install the rear cowl.

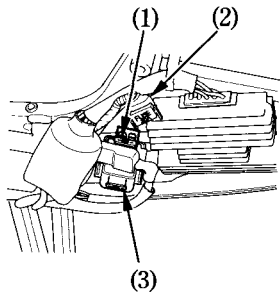


Main Fuse B:

The main fuse B (4) is attached the battery box cover.

The specified fuse is:

30 A

1. Remove the front seat (page 51).
2. Open the main fuse B cover (5).
3. Pull out the old fuse and install a new fuse.
The spare main fuse (3) is located under the starter magnetic switch.
4. Close the main fuse B cover and install the front seat.

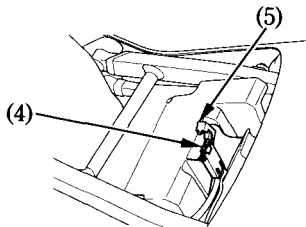

- | | |
|---------------------|-----------------------|
| (1) Main fuse A | (4) Main fuse B |
| (2) Wire connector | (5) Main fuse B cover |
| (3) Spare main fuse | |