



(Ref.No.) Description	Function
(1) Mode switch	Resets the tripmeter or selects the operation mode: tripmeter or odometer (page 24).
(2) High coolant temperature indicator (red)	<p>Lights when the coolant is over the specified temperature. If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 33 – 34 and do not ride the scooter until the problem has been corrected.</p> <p>NOTICE Exceeding maximum running temperature may cause serious engine damage.</p>

