



### **Restart the engine**

- To restart the engine, open the throttle.
- Engine will not start without riding in proper position.
- Make sure the engine is started.
- When starting on a hill, release the brake lever after making sure the feeling of scooter moving.
- While the engine is stopping by the Idling Stop system, push the Idling Stop switch to the “IDLING” to cancel the Idling Stop system.
- If the engine does not start even open the throttle, the battery may discharge. See your Honda dealer for checking the battery.



See your Honda dealer for checking the battery as specified in the maintenance schedule (page 90 ).

