




1. Place an oil drain pan under the crankcase. Remove the oil fill cap/dipstick, oil drain bolt (1) and sealing washer (2).
2. Check that the sealing washer on the drain bolt is in good condition and install the bolt. Replace the sealing washer every other time the oil is changed, or each time if necessary.  
Oil drain bolt torque:  
24 N·m (2.4 kgf·m , 18 lbf·ft)
3. Fill the crankcase with the recommended grade oil; approximately:  
0.8 ℓ (0.8 US qt , 0.7 Imp qt)
4. Reinstall the oil fill cap/dipstick.
5. Start the engine and let it idle for 3–5 minutes.
6. Stop the engine and wait 2–3 minutes.  
Check that the oil level is at the upper level mark on the oil fill cap/dipstick with the scooter upright on firm, level ground.  
Make sure there are no oil leaks.

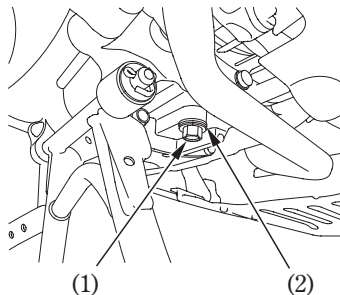

(1) Oil drain bolt

(2) Sealing washer

