

Inspection


The reserve tank is located under the right side of the fuel tank.

Check the coolant level in the reserve tank (1) while the engine is at the normal operating temperature with the motorcycle in an upright position. If the coolant level is below the LOWER level mark (2), remove the cap holder (3) by removing the bolt (4) and remove the reserve tank cap (5). Add coolant mixture until it reaches the UPPER level mark (6). Do not remove the radiator cap.

⚠ WARNING

- * Do not remove the radiator cap when the engine is hot. The coolant is under pressure and could scald you.
- * Keep hands and clothing away from the cooling fan, as it starts automatically.

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your Honda dealer for repair.

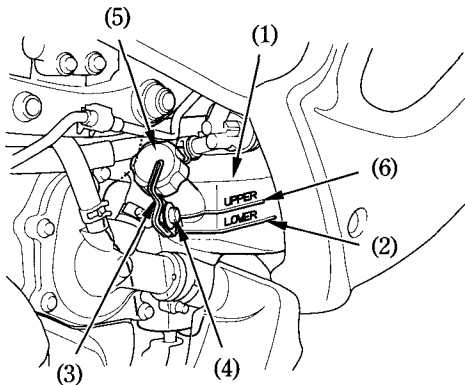

- | | |
|----------------------|----------------------|
| (1) Reserve tank | (4) Bolt |
| (2) LOWER level mark | (5) Reserve tank cap |
| (3) Cap holder | (6) UPPER level mark |