


Front Turn Signal Bulb

1. Remove the inner cowl (page 44).
2. Turn the socket (1) 90° counterclockwise and remove it.
3. Pull the bulb (2) without turning.
4. Install a new bulb in the reverse order of removal.

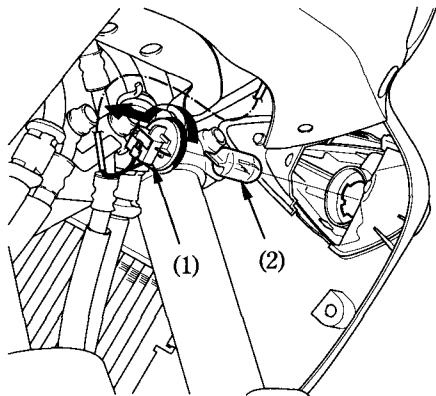

- (1) Socket
(2) Bulb