

Starting the Engine

Your motorcycle may be kickstarted with the transmission in gear by pulling in the clutch lever before operating the kickstarter.

Preparation


Make sure the transmission is in neutral. Turn the fuel valve ON.

Starting Procedure

To restart a warm engine, follow the procedure for *High Air Temperature*.

Normal Air Temperature

10°–35°C (50°–95°F)

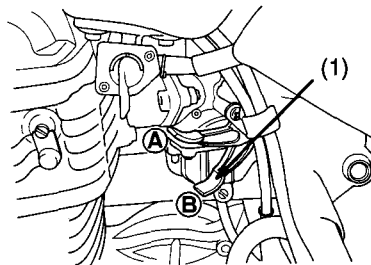

(1) choke lever
(A) Fully ON
(B) Fully OFF

1. Pull the choke lever (1) up all the way to fully ON (A).