


Compression damping adjustment:

This adjustment affects how quickly the fork compresses. The fork compression damping adjuster screw (1) has 16 positions or more. Turning the adjuster screw one full turn changes the adjuster 4 positions. To adjust the adjuster to the standard position, proceed as follows:

1. Turn the adjuster screw counterclockwise until it stops, that is full soft.
2. Turn the adjuster screw clockwise 1-1/4 turns to the fifth position; that is the standard position.
3. Make sure that both the right and left forks are adjusted in the same position.

CAUTION:

- * **Always start with full hard when adjusting damping.**

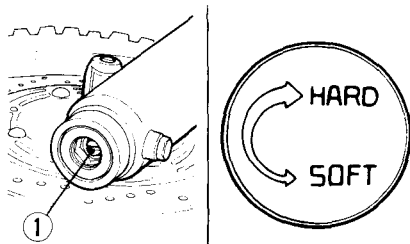

(1) Compression damping adjuster screw