

## Fuel Tank

The fuel tank capacity, including the reserve, supply is:

9.0 l (2.4 US gal, 2.0 Imp gal)

The reserve supply alone is:

2.0 l (0.5 US gal, 0.4 Imp gal)

To open the fuel tank cap (1), pull out the breather tube (2) from the steering stem nut.

Then turn the fuel tank cap counterclockwise.

After refueling, be sure to tighten the fuel tank cap firmly by turning it clockwise. Insert the breather tube into the steering stem nut.

Use low-lead or unleaded petrol with an Octane number of 96 or higher.

### FOR AUSTRALIA ONLY:


Use unleaded fuel with a research octane number of 91 or higher.

After refueling, be sure to tighten the fuel tank cap firmly by turning it clockwise.

Insert the breather tube into the steering stem nut.

## CAUTION:

- \* If “spark knock” or “pinking” occurs at a steady engine speed under normal load, change brands of petrol. If spark knock or pinking persists, consult your authorized Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda’s Limited Warranty.

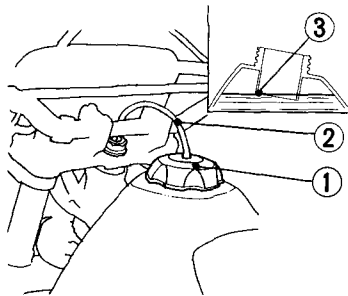

- (1) Fuel tank cap
- (2) Breather tube

- (3) Filler neck