

ENGINE OIL

Engine Oil Level Check


Check the engine oil level each day before operating the motorcycle.

The oil filler cap/dipstick (1) is at the front of the right crankcase cover and contains a dipstick for measuring the oil level. Oil level must be maintained between the upper (2) and lower (3) level marks on the oil filler cap/dipstick (1).

1. Hold the motorcycle on firm level ground.
2. Start the engine and let it idle for a few minutes.
3. Stop the engine. After a few minutes, remove the oil filler cap/dipstick (1) and wipe it clean, then reinsert the dipstick without screwing it in.

The oil level should be between the upper (2) and lower (3) level marks on the oil filler cap/dipstick.

4. If required, add the specified oil up to the upper level mark (See page 55). Do not overfill.
5. Reinstall the oil filler cap/dipstick. Check for oil leaks.

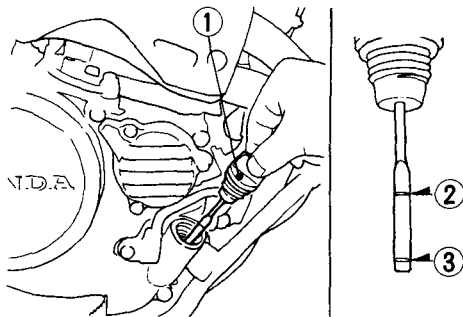

- (1) Oil filler cap/dipstick
(2) Upper level mark
(3) Lower level mark