


## AIR CLEANER

(Refer to the maintenance precautions on page 52).

The air cleaner should be serviced at regular intervals (page 49). When riding in unusually wet or dusty areas, more frequent service may be necessary.


1. Remove the left side cover (1) by turning the latches (2) 90° counterclockwise and pulling the cover outward.

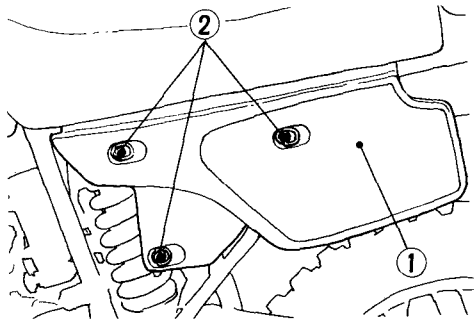

(1) Side cover

(2) Latches

2. Remove the set spring (3).
3. Remove the air cleaner element (4).
4. Wash the element in clean nonflammable or high flash point solvent and dry it thoroughly.

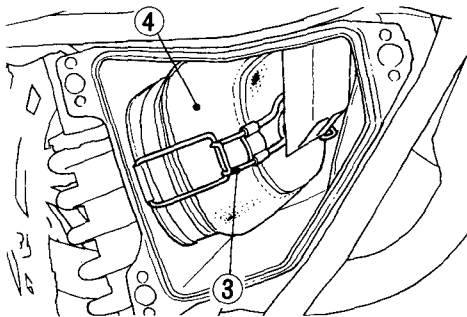

(3) Set spring

(4) Air cleaner element