

WHEEL REMOVAL

(Refer to the maintenance precautions on page 52).

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support under the engine.
2. Remove the speedometer cable set screw (1) and disconnect the speedometer cable (2).
3. Remove the brake hose guide.
Remove the caliper assembly from the fork leg by removing the mount bolts. (3).


CAUTION:

* **Support the caliper assembly so that it does not hang from the brake hose. Do not twist the brake hose.**

4. Remove the front axle nuts (4) and the front axle holder (5).
5. Unscrew the axle (6). Remove the wheel.

NOTE:

* Do not squeeze the brake lever when the wheel is off the motorcycle. The caliper piston will be forced out of the cylinder with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer.

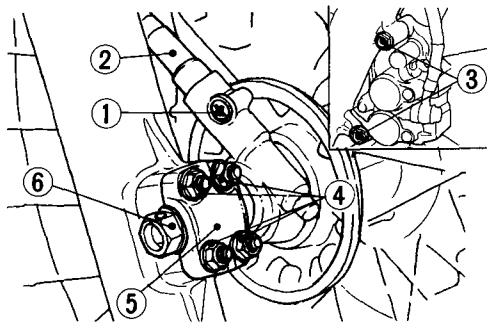

- | | |
|-----------------------|----------------------|
| (1) Screw | (4) Axle holder nuts |
| (2) Speedometer cable | (5) Axle holder |
| (3) Mount bolts | (6) Axle |