

Starting the Engine

Always follow the proper starting procedure described below.

Preparation


Make sure that the transmission is in neutral and the engine stop switch is at RUN (\odot). Turn the fuel valve ON.

Starting Procedure

To restart a warm engine, follow the procedure for *High Air Temperature*.

Normal Air Temperature
10°–35°C (50°–95°F)

LEFT
SIDE

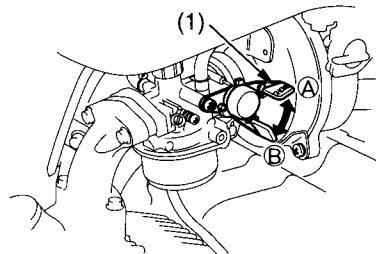

(1) choke lever

(A) fully ON
(B) fully OFF

1. Pull the choke lever (1) up all the way to fully ON (A).