

## Quick Reference

---

Initial Maintenance	about 100 miles (150 km) or one month.
Regular Maintenance	about every 600 miles (1,000 km) or six months.
Pre-ride Inspection	Check the following items each time before you ride (page 25 ): tires, rims, leaks, engine oil, fuel, drive chain, cables, nuts & bolts, throttle, and brakes.
Fuel/Capacity	unleaded gasoline, pump octane number of 86 or higher tank: 1.64 US gal (6.2 ℓ , 1.36 Imp gal) reserve: 0.55 US gal (2.1 ℓ , 0.46 Imp gal)
Engine Oil	API Service Classification SF or SG; SAE 10W-40
Maximum Weight Capacity	132 lbs (60 kg) rider only (no passenger or cargo) and any accessories
Tires	Front: 2.50-14 4PR , Rear: 3.00-12 4PR
Tire Pressure (cold)	Front: 15 psi (100 kPa , 1.00 kgf/cm <sup>2</sup> ) Rear: 15 psi (100 kPa , 1.00 kgf/cm <sup>2</sup> )
Spark Plug	CR6HSA (NGK) or U20FSR-U (DENSO)