

## SEAT

To remove the seat (1), insert the ignition key into the seat lock (2) and turn it clockwise. Raise rear end of the seat a little. Standing behind the motorcycle, pull the seat back until it is opposed by the rear carrier, then continue to pull it up and back. To install the seat, insert the prong into the recess under the frame cross member and then push down on the rear of the seat. When install the seat, be sure the cushion rubbers on the bottom of the seat do not ride over the side covers.

### CAUTION:

**\* Be sure the seat is locked securely in position after installation.**

