

## **Honda SMART Key System** (Continued)

### **Switching the Honda SMART Key System**

#### **■ To switch the Honda SMART Key system to activation or deactivation**

Press the ON/OFF button until the Honda SMART Key LED changes color.

#### **■ To check the Honda SMART Key system status**

Lightly press the ON/OFF button. The Honda SMART Key LED will show the status. When the Honda SMART LED is:

Green: (activate)	Honda SMART Key system authentication can be performed.
Red: (inactivate)	Honda SMART Key system authentication cannot be performed.

