


Clutch lever ➔ P.87

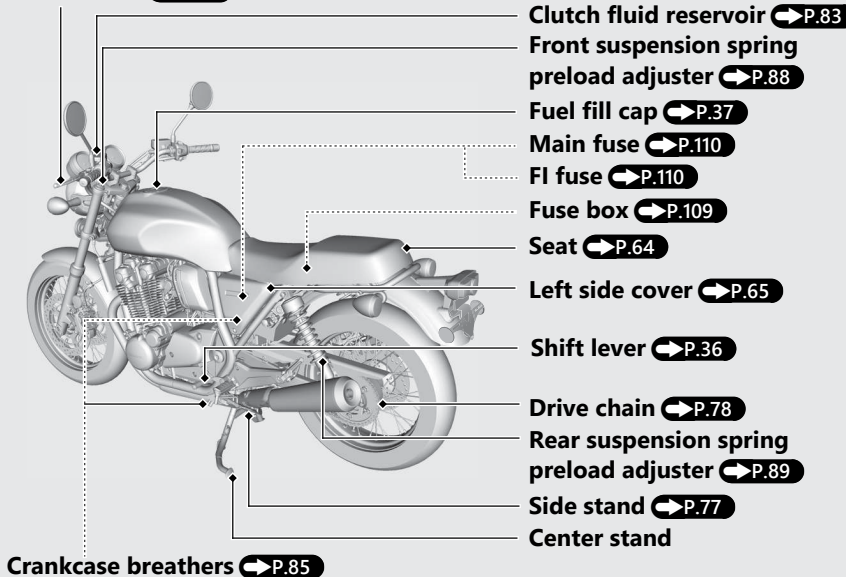

Clutch fluid reservoir ➔ P.83

**Front suspension spring
preload adjuster** ➔ P.88

Fuel fill cap ➔ P.37

Main fuse ➔ P.110

FI fuse ➔ P.110

Fuse box ➔ P.109

Seat ➔ P.64

Left side cover ➔ P.65

Shift lever ➔ P.36

Drive chain ➔ P.78

**Rear suspension spring
preload adjuster** ➔ P.89

Side stand ➔ P.77

Center stand

Crankcase breathers ➔ P.85