

Instruments *(Continued)*

Changing of mileage units:

- 1 After clock setting, the mileage unit starts flashing.
- 2 Press A-button to select either km or mile.
- 3 Press B-button. The mileage unit is set, and the display moves to changing of the fuel mileage unit.

Changing of fuel mileage units:

- 1 After changing of the mileage unit,, the fuel mileage unit starts flashing.
- 2 Press A-button to select either km/L or L/100km.
If the "mile" for mileage is selected, press the A-button to select either "mile/L" or "mile/gal".
- 3 Press B-button. The changing of the fuel mileage unit is set, and the display returns to the ordinary display.