


Storage Equipment

Helmet Holder

Helmet holders are located on the left side below the seat and on the right side under the seat.

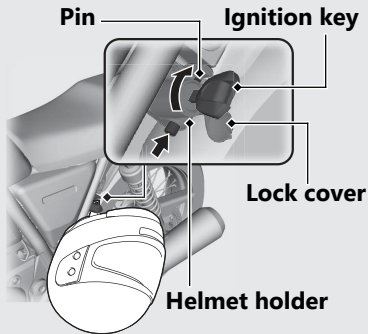

Unlocking

Open the lock cover, insert the ignition key and turn it clockwise.

Locking

- 1 Hang your helmet on the holder pin and push it in to lock.
- 2 Remove the key and close the lock cover.
 - ▶ Use the helmet holder only when parked.