



4. Thoroughly clean the inside of the air cleaner housing.
5. Install the air cleaner element or a new one.
6. Install the parts in the reverse order of removal.