

Cleaning the Crankcase Breather

Crankcase breather tube A

1. Place a suitable container under the crankcase breather tube.
2. Remove the crankcase breather tube plug from the tube.
3. Drain deposits into a suitable container.
4. Install the crankcase breather tube plug.

Crankcase breather tube B

1. Place a suitable container under the crankcase breather tube.
2. Remove the crankcase breather tube and drain deposits.
3. Reinstall the crankcase breather tube.

