

# Indicators




## Low oil pressure indicator

Comes on when the ignition switch is turned on.

Goes off when the engine starts.

**If it comes on while engine is running:** ( P88)

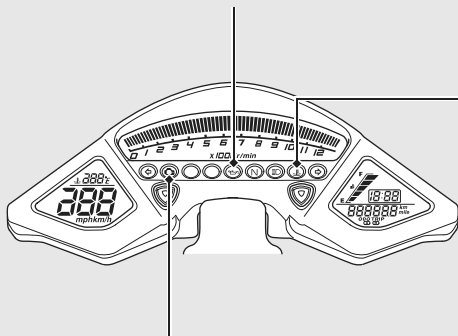


## High coolant temperature indicator

**If it comes on while riding:**

( P87)



## PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned on with the engine stop switch in the Run  position.

**If it comes on while engine is running:** ( P88)