

Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

1. Place the transmission in Neutral. Stop the engine.
2. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
3. Loosen the bearing holder pinch bolt.
4. Turn the bearing holder clockwise or counterclockwise to obtain the proper chain slack with the pin spanner.

5. Tighten the bearing holder pinch bolt to the specified torque.

Torque: 65 lbf·ft (88 N·m, 9.0 kgf·m).

If a torque wrench is not used for this installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.