

Troubleshooting

Engine Will Not Start	P. 86	Tire Puncture	P. 89
Overheating (High coolant temperature indicator is on)	P. 87	Electrical Trouble	P. 97
Warning Indicators On or Flashing	P. 88	Battery Goes Dead	P. 97
Low Oil Pressure Indicator	P. 88	Burned-out Light Bulb	P. 97
PGM-FI (Programmed Fuel Injection)		Blown Fuse.....	P. 101
Malfunction Indicator Lamp (MIL).....	P. 88		