## Tire Puncture ► Removing Wheels

- Remove the rear axle shaft, washer B, brake caliper bracket, side collars and rear wheel.
  - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
  - Avoid getting grease, oil, or dirt on the disc or pad surfaces.
  - ▶ Do not push the brake pedal while the brake caliper is removed.

## Installation

- **1.** To install the rear wheel, reverse the removal procedure.
  - Take care to prevent the brake caliper from scratching the wheel during installation.

## NOTICE

When installing a wheel or caliper into original position, carefully fit the brake disc between the pads to avoid scratching them.

**2.** Make sure that the lug on the brake caliper bracket is positioned in the slot on the swingarm.

