

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 88	<b>Other Warning Indication</b> .....	P. 92
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 89	Fuel Gauge Failure Indication.....	P. 92
<b>Warning Indicators On or Flashing</b> .....	P. 90	<b>Tire Puncture</b> .....	P. 93
Low Oil Pressure Indicator .....	P. 90	<b>Electrical Trouble</b> .....	P. 100
PGM-FI (Programmed Fuel Injection)		Battery Goes Dead .....	P. 100
Malfunction Indicator Lamp (MIL).....	P. 90	Burned-out Light Bulb .....	P. 100
ABS (Anti-lock Brake System) Indicator .....	P. 91	Blown Fuse.....	P. 105