
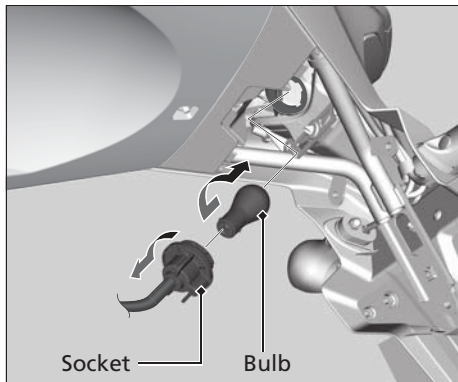


Brake/Tail Light Bulb

1. Remove the bolts and rear fender cover.

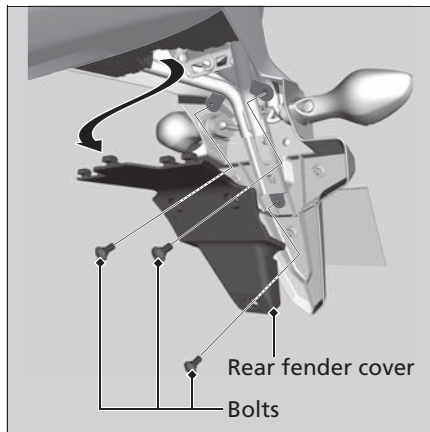

2. Turn the socket counterclockwise, and remove it.
3. Slightly press the bulb and turn it counterclockwise.
4. Install a new bulb and reinstall the parts in the reverse order of removal.