

Gauges, Indicators & Displays

13	Combined ABS indicator (amber) (CBR1000RR ABS)	Lights when there is any abnormality in the Combined ABS (Combined Anti-lock Brake System). Normally, this indicator comes on when the ignition switch is turned ON, and goes off after you ride the motorcycle at a speed above 6 mph (10 km/h). If the indicator comes on while riding, stop the motorcycle in a safe place and turn off the engine. Refer to <i>Combined ABS Indicator</i> , page 78 . For information about Combined ABS, see pages 76 – 78 . <i>Lamp Check.</i>
14	control button B	Use this button for the following purposes: <ul style="list-style-type: none">• To change indication of current fuel mileage, average fuel mileage, and fuel consumption (pages 33 , 37)• To change unit of speedometer, odometer, tripmeter and fuel mileage meter (page 40)• To change indication mode of fuel mileage (page 42)• To change the reset mode of tripmeter A and fuel mileage meter (page 39)• To adjust time (page 43)• To change the setting of the shift indicator and selection of the display (pages 46 – 48)• To change unit of the temperature meter (page 41)