

Control Button B

Control button B is used to:

- to change the temperature unit for the coolant temperature meter (page 41)
 - to change the indication mode of the fuel mileage (page 42)
 - to change the shift indicator and its display (pages 46 – 48)
 - to set the digital clock (page 43)
- select the indication of the fuel mileage meter (pages 33 , 37)
 - to change the reset mode of tripmeter A and the fuel mileage meter (page 39)
 - to change the speed, mileage and fuel mileage unit for the speedometer/odometer/tripmeter/fuel mileage meter (page 40)