

Maintenance Schedule

ITEM		FREQUENCY	NOTE	ODOMETER READING (Note 1)							Refer to page	
				× 1,000 mi	0.6	4	8	12	16	20		24
				× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	
NON-EMISSION-RELATED ITEMS		DRIVE CHAIN			EVERY 500 mi (800 km) I, L							160
		BRAKE FLUID	4			I	I	R	I	I	R	145
		BRAKE PAD WEAR				I	I	I	I	I	I	148
		BRAKE SYSTEM			I		I		I		I	144
	*	BRAKE LIGHT SWITCH					I		I		I	—
	*	HEADLIGHT AIM					I		I		I	—
		CLUTCH SYSTEM			I	I	I	I	I	I	I	131
		SIDE STAND					I		I		I	159
	*	SUSPENSION					I		I		I	—
	*	NUTS, BOLTS, FASTENERS			I		I		I		I	—
	**	WHEELS/TIRES					I		I		I	—
	**	STEERING HEAD BEARINGS			I		I		I		I	—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 246).

**In the interest of safety, we recommend these items be serviced only by your Honda dealer.