

Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt, dust, or water in the fuel tank.


Fuel Capacity

Fuel tank capacity:
4.68 US gal (17.7 ℓ)

The tank should be refilled as soon as possible when the low fuel indicator comes on.

Refueling Procedure

Refer to *Safety Precautions* on page 92 .

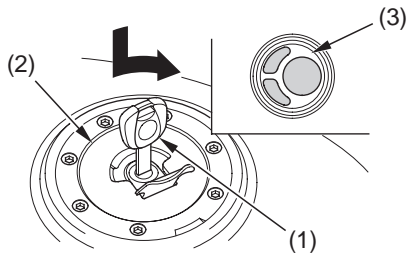

- (1) ignition key (3) level plate
(2) fuel filler cap

1. Insert the ignition key (1) in the fuel filler cap (2) and turn it clockwise.

(cont'd)