

 
## If a Fuse Blows

### Main Fuse and FI Fuse Access:

(CBR1000RR)

3. Release the tabs (1), then remove the starter motor magnetic switch cover (2).
4. To check or replace the main fuse (3) and FI fuse (4), pull out the old fuse. Look for a burned wire inside the fuse. If the fuse is blown (6), replace it with a spare fuse (7) of the same rating. The spare fuses are located in the fuse box (page 217).

MAIN FUSE,  
FI FUSE



(6) blown fuse

5. Install the starter motor magnetic switch cover.

(CBR1000RR ABS)

3. Open the main and FI fuse box cover (5).
4. To check or replace the main fuse (3) and FI fuse (4), pull out the old fuse. Look for a burned wire inside the fuse. If the fuse is blown (6), replace it with a spare fuse (7) of the same rating. The spare fuses are located in the fuse box (page 217).
5. Close the main and FI fuse box cover.

(cont'd)