
Switches

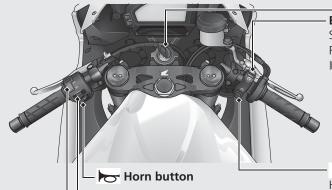

- Engine stop switch

Should normally remain in the RUN \bigcap position.

► In an emergency, switch to the OFF position to stop the engine.

Pressing the switch turns the turn signal off.

Headlight dimmer switch

- **≣**○: High beam

(3) Start/lap button

Headlight turns off when operating the starter motor.

Also use lap timer → P. 34