


## Instruments *(Continued)*

### Setting Mode B

#### 1 Setting of REV indicators:

You can change the setting of the REV indicators.

- !a To change the setting mode B, turn the ignition switch to ON while pressing **SEL** button until the display check is finished. The blinking of bar segment in the tachometer shows the currently applied blinking RPM, and the numerical tachometer display shows it. At the same time, all of the REV indicators blink.

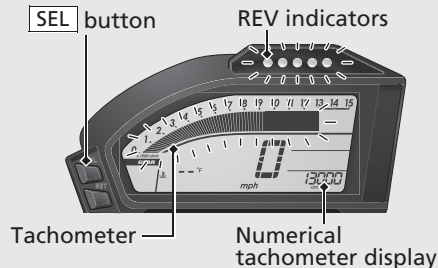

- !b Each time **SEL** button is pressed, the blinking RPM set value increase by 200 r/min (rpm) (one segment). When the set value exceeds the allowable range, the RPM set value automatically returns to 4,000 r/min (rpm).
- u Press and hold **SEL** button to advance the blinking RPM setting value fast.

Available Setting Range

4,000 -to- 13,000 r/min (rpm)