

## Tire Puncture u Removing Wheels

6. Remove the brake caliper bracket, rear wheel and side collars.
  - u Support the brake caliper so that it doesn't hang from the brake hose. Do not twist the brake hose.
  - u Avoid getting grease, oil, or dirt on the disc to pad surfaces.
  - u Do not push the brake pedal while the brake caliper is removed.

### Installation

1. To install the rear wheel, reverse the removal procedure.
  - u Take care to prevent the brake caliper from scratching the wheel during installation.

#### NOTICE

When installing the brake caliper into position, carefully fit the brake disc between the pads to avoid scratching them.

2. Make sure that the lug on the brake caliper bracket is positioned in the slot on the swingarm.

