

SHIFT INDICATOR

You can change the setting of the shift indicators.

- 1 Select the "OFF" (deactivate) or an engine revolution at which the shift indicators start blinking using the [SEL] ▲ (up) or [SEL] ▼ (down) button.
 - u Press and hold the [SEL] ▲ (up) or [SEL] ▼ (down) button to move the menu quickly.
 - u The value increases by 200 r/min (rpm) increments.
 - u Available setting range:
4,000 to 16,600 r/min (rpm)
- 2 Press the [MODE] button. The shift indicator setting is set, and then the display returns to the upper level hierarchy.

12:34	SETTING	0 mph
FUNCTION	◀	16400 16600 OFF
LAP TIME	DISPLAY MODE	
DISPLAY	SHIFT INDICATOR	4000 r/min
GENERAL	BRIGHTNESS	4200 4400
SERVICE	BACKGROUND	4600

Information of the Shift Indicator:

→P.96