


## Battery

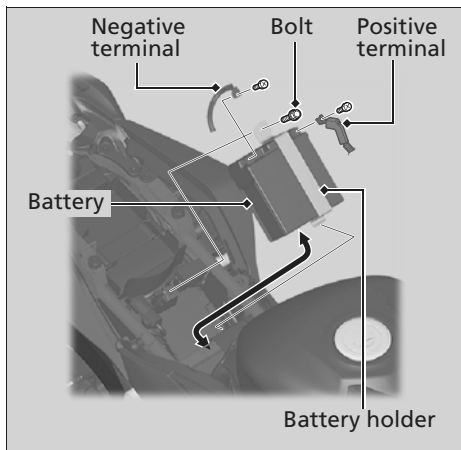

### Removal

Make sure the ignition switch is off.

1. Remove the front seat. [► P. 50](#)

2. Remove the battery holder by removing the bolt.
3. Disconnect the negative  $\ominus$  terminal lead from the battery.
4. Disconnect the positive  $\oplus$  terminal lead from the battery.
5. Remove the battery taking care not to drop the terminal nuts.

### Installation

Install the parts in the reverse order of removal. Always connect the positive  $\oplus$  terminal first. Make sure that bolts and nuts are tight.

Readjust the clock after the battery is reconnected since the clock goes wrong once the battery is disconnected.

For proper handling of the battery, see "Maintenance Fundamentals." [► P. 39](#)  
 "Battery Goes Dead" [► P. 93](#)