

Stop Switch.....	24, 103	Honda Contacts.....	121
Stopping .....	103	Horn Button.....	24
<b>Environment.....</b>	<b>109</b>	<b>I</b>	
<b>F</b>			
<b>Flooded Engine.....</b>	<b>26</b>	Ignition Cut-off System	
<b>Front Seat.....</b>	<b>53</b>	Banking Sensor.....	103
<b>Fuel</b>		Ignition Key .....	102
Gauge.....	19	Ignition Switch .....	25, 26
Recommended.....	28	Indicators .....	22
Remaining.....	19	Information Record.....	127
Tank Capacity.....	28	Instruments.....	18
<b>Fuses .....</b>	<b>41, 98</b>	<b>L</b>	
<b>G</b>			
<b>Gasohol.....</b>	<b>117</b>	Load Limits.....	15
<b>Gasoline.....</b>	<b>13, 28, 117</b>	Loading Guidelines .....	15
<b>H</b>			
<b>Headlight Aim.....</b>	<b>80</b>	<b>M</b>	
<b>Headlight Dimmer Switch .....</b>	<b>24</b>	Maintenance	
<b>Helmet Holder.....</b>	<b>29</b>	Fundamentals.....	36
<b>High Beam Indicator.....</b>	<b>23</b>	Importance .....	31
		Safety.....	32
		Schedule .....	33
		Maximum Weight Limit .....	15