

# Maintenance

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

An optional larger tool kit may be available.  
Check with your Honda dealer's parts department.

|   |       |                                     |       |
|---|-------|-------------------------------------|-------|
| <b>Importance of Maintenance</b> .....              | P. 32 | <b>Coolant</b> .....                | P. 67 |
| <b>Maintenance Schedule</b> .....                   | P. 34 | <b>Brakes</b> .....                 | P. 69 |
| <b>Maintenance Fundamentals</b> .....               | P. 37 | <b>Side Stand</b> .....             | P. 72 |
| <b>Removing &amp; Installing Body Components</b> .. | P. 52 | <b>Drive Chain</b> .....            | P. 73 |
| Battery .....                                       | P. 52 | <b>Clutch</b> .....                 | P. 77 |
| Clip .....  | P. 53 | <b>Throttle</b> .....               | P. 80 |
| Front Seat.....                                     | P. 54 | <b>Crankcase Breather</b> .....     | P. 81 |
| Harness Band Clip .....                             | P. 55 | <b>Other Adjustments</b> .....      | P. 82 |
| Middle Cowl.....                                    | P. 55 | Adjusting the Headlight Aim .....   | P. 82 |
| Rear Seat .....                                     | P. 57 | Adjusting the Rear Suspension ..... | P. 83 |
| Right Under Cowl .....                              | P. 58 |                                     |       |
| <b>Spark Plug</b> .....                             | P. 59 |                                     |       |
| <b>Engine Oil</b> .....                             | P. 62 |                                     |       |
| <b>Air Cleaner</b> .....                            | P. 66 |                                     |       |