

## Starter Motor Operates But Engine Does Not Start

---


Check the following items:

- Check the correct engine starting sequence. ➔ P. 27
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

## Starter Motor Does Not Operate

---

Check the following items:

- Check the correct engine starting sequence. ➔ P. 27
- Make sure engine stop switch is in the  (Run) position. ➔ P. 24
- Check for a blown fuse. ➔ P. 100
- Check for a loose battery connection or battery terminal corrosion. ➔ P. 40, ➔ P. 52
- Check the condition of the battery. ➔ P. 96

If the problem continues, have your motorcycle inspected by your dealer.