

Instruments *(Continued)*

To reset the tripmeter, average fuel mileage and fuel consumption

- To reset tripmeter A, average fuel mileage, and fuel consumption together, press and hold **SET** button with tripmeter A, average fuel mileage, or fuel consumption displayed.

Tripmeter A **Average fuel mileage** **Fuel consumption**




- When they are reset, "0.0" is displayed at each indication.



- Then, the display returns to the last selected indication.



- To reset tripmeter B, press and hold **SET** button with tripmeter B displayed.

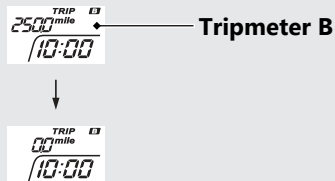

Also, the tripmeter A, average fuel mileage, and fuel consumption will automatically reset by refueling more than the reserve amount and riding your motorcycle for 0.06 mile (0.1 km).

You can activate or deactivate the automatic reset mode by refueling. ➡ **P.27**