

Equipment

Owner's Manual	55, 129
Tool Kit.....	55

F

Flooded Engine	51
Front Seat	80
Front Suspension	106

Fuel

Average Fuel Mileage Meter.....	22
Consumption Meter	23
Current Fuel Mileage Meter	22
Gauge	20
Recommended	53
Remaining.....	20
Reserve Fuel Consumption.....	24
Tank Capacity	53

Fuses	69, 125
--------------------	---------

G

Gasohol	143
Gasoline	53
Gear Position Indicator	20

H

Hazard Switch	48
Headlight Aim	104
Headlight Dimmer Switch	48
Helmet Holder	54
High Beam Indicator	43
Honda Contacts	146
Horn Button	48

I**Ignition Cut-off System**

Banking Sensor.....	129
Side Stand.....	94

Ignition Key	128
---------------------------	-----

Ignition Switch	49, 51, 129
------------------------------	-------------

Indicators	42
-------------------------	----

Information Record	152
---------------------------------	-----

Instruments	18
--------------------------	----

L

Labels	7
---------------------	---

Load Limits	15
--------------------------	----

Loading Guidelines	15
---------------------------------	----

Low Oil Pressure Indicator	45, 111
---	---------