

 **Torque Control indicator** **CBR650RA only**

- Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 3 mph (5 km/h) to indicate Torque Control is ready to work.
- Blinks when Torque Control is operating.

If it comes on while riding:  **P.109**

 **Torque Control OFF Indicator** **CBR650RA only**

- Comes on when the Torque Control is turned Off.

 **High beam indicator** **Neutral indicator**

Comes on when the transmission is in Neutral.