

Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” P. 71

Fuse Box Fuses

1. Remove the front seat. P. 81
2. Open the fuse box covers.
3. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse.
Always replace a blown fuse with a spare fuse of the same rating.
4. Close the fuse box covers.
5. Reinstall the front seat.

