


## Instruments *(Continued)*

### 3 Backlight brightness adjustment:

You can adjust the brightness to one of five levels.

- 1 Press SEL button. The brightness is switched.

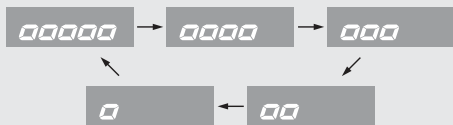

- 2 Press and hold SEL button. The backlight is set, and then the display moves the changing of the speed and mileage unit.

### 4 Changing of speed and mileage unit:

- 1 Press SEL button to select either "mph" and "mile" or "km/h" and "km".



- 2 Press and hold SEL button. The speed and mileage unit is set, and then the display will return to the ordinary display.

The established setting can also be set by turning the ignition switch to the OFF position.

The control is automatically switched from the setting mode to the ordinary display if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.