

## Indicators *(Continued)*

### **(P)** Parking brake indicator

CRF1100D/D4

Lights as a reminder that you have not released the parking brake lever.

### **N** Neutral indicator

Comes on when the transmission is in Neutral.



### **⛽** Low fuel indicator

- Comes on briefly when the ignition switch is turned to the ON position.
- Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when low fuel indicator comes on:

Approximately 0.95 US gal (3.6 L) **CRF1100A/D**

Approximately 1.03 US gal (3.9 L) **CRF1100A4/D4**

**If the indicator comes on and the fuel gauge indicator flashes:** **P.305**