
## **Instruments**

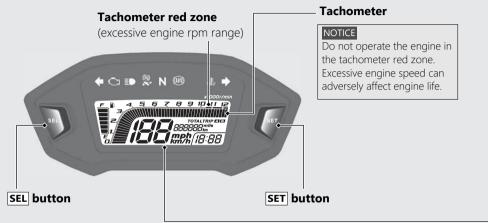

## **Display Check**

When the ignition switch is turned to the | (On) position, all the mode and digital segments will show. If any part of these displays does not come on when it should, have your dealer check for problems.