
 **High beam indicator**

 **High coolant temperature indicator**

Comes on briefly when the ignition switch is turned to the **I** (On) position with the engine stop switch in the **⌚** (Run) position.

If it comes on while running:  **P.88**

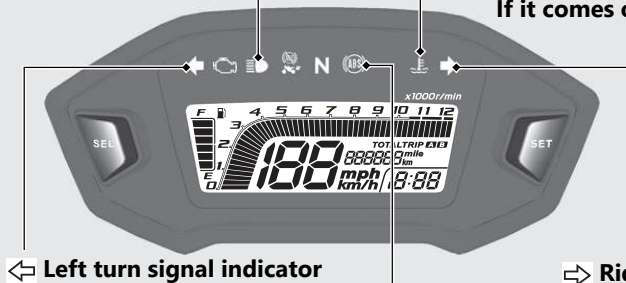

 **Left turn signal indicator**

 **Right turn signal indicator**

 **ABS (Anti-lock Brake System) indicator** **CRF250RLA**

Comes on when the ignition switch is turned to the **I** (On) position. Goes off when your speed reaches approximately 6 mph (10 km/h).

If it comes on while riding:  **P.89**