

- **5.** Turn the socket counterclockwise, and remove it.
- **6.** Slightly press the bulb and turn it counterclockwise.
- Install a new bulb and parts in the reverse order of removal.

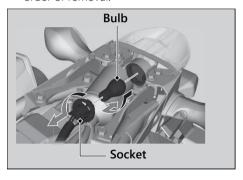

## | Front/Rear Turn Signal Light Bulb

- **1.** Remove the screw.
- 2. Remove the turn signal lens.
- **3.** Slightly press the bulb and turn it counterclockwise.

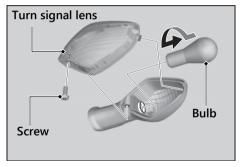

**4.** Install a new bulb and parts in the reverse order of removal