

Multi Information Display

Air Temperature Meter

Push the INFO button once to display the air temperature.
After 5 seconds, the previous display returns.

USA: Fahrenheit (°F)

Canada: Centigrade (°C)

Temperature Display

Below 13°F (-11°C)	“- -” is displayed
Between: 14°F – 122°F (-10°C – 50°C)	actual air temperature is indicated.
Above 122°F (50°C)	The display will remain and blink “122°F (50°C)”

The temperature sensor is located in the upper fairing. Therefore, the temperature reading can be affected by heat reflection from the road surface, engine heat, and the exhaust from the surrounding traffic. This can cause an error in the temperature reading when your speed is under 19 mph (30 km/h).

For USA

83 °F



INFO button



For Canada

23 °C